


Package Contents:

1. Machine Body
2. Handle
3. Enclosed inside of tape axle three spacers for use with 3" through 7" QuickSeam products

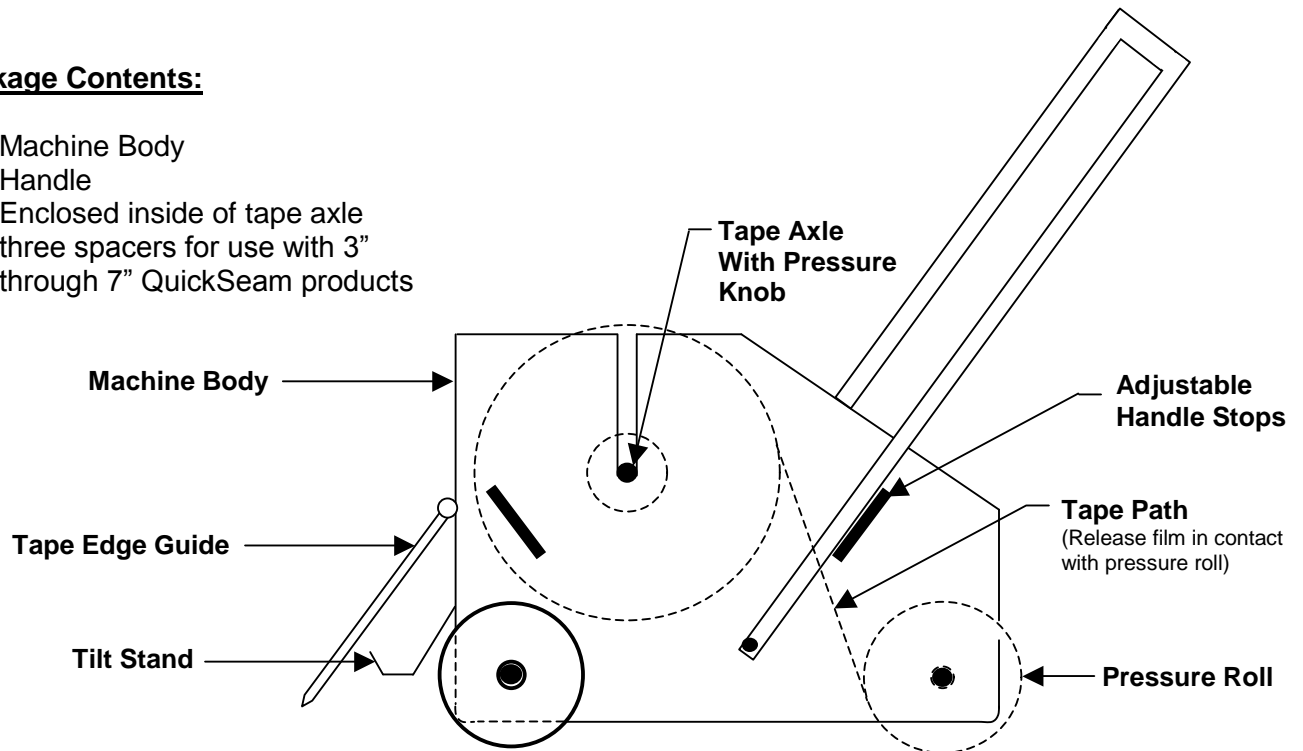

Assembly:

1. Remove both machine body and handle from packaging
2. Attach handle to the machine body using the wing nuts and washers taped to the machine body.
3. Handle stops located on each side of the machine body may be adjusted using the corresponding holes to adjust handle angle for operator height. Move the handle stop on both sides of the machine body to equally opposed positions and tighten into place using the provided wing nuts. Handle stops must be secured prior to operation!

Loading the QuickTaper unit:

1. Remove Tape Axle from Machine Body by loosening the pressure knobs on either side of the axle and lifting straight up.
2. Remove the pressure knob from the Tape Axle to remove the core caps from the axle.
3. Inside of the Tape Axle are three spacers used for 3", 6" and 7" QuickSeam Tape products. The spacers are color coded Red Blue and Green and are used in the following combinations with the corresponding QuickSeam product:
 - a. 3" QuickSeam Seam Tape use **Red, Blue, Green**
 - b. 6" QuickSeam Seam Tape use **Blue only**
 - c. 7" QuickSeam Seam Tape use **Green only**
4. Place Core Caps on each side of the core of the QuickSeam tape roll and place the axle through the center of the caps.
5. Place the corresponding spacers as indicated above on the axle, and loosely screw the pressure knob on to the Axle.
6. Place the tape and Axle back into the Machine Body, and tighten the pressure knob until there is slight friction when spinning the roll.

(Continued on next page)

Installing QuickSeam Tape with the QuickTaper unit:

1. Position the start of the QuickSeam tape roll so that it can be easily pulled from the backside of the machine.
2. Place the QuickTaper unit on the seam tape application line so that the edge of the tape roll is in line with the markings.
3. Tilt the unit forward until it comes to rest on the Tilt Stand. **Make sure that the Tape Edge Guide is in the upright position to avoid damage to the membrane.**
4. Pull the start of the tape down and underneath the Pressure Roll, and set the tape onto the tape application line.
5. Slowly tilt the unit back into it's up right position, and set the Tape Edge Guide located on the front of the QuickTaper unit to follow the tape application line.
6. Proceed to apply the QuickSeam Tape.

Frequently asked questions:

1. Q. When I stop pushing the machine the tape roll continues to spin.
A. Tighten the Pressure Knob to increase axle friction
2. Q. Can I use this unit to apply tape over plates and battens
A. Yes, this machine is designed with a special pressure wheel that allows you to apply tape over mechanical attachments in the seams.

Caution:

1. Never walk backwards on a roof while operating this equipment.
2. Do not use this unit in areas where a fall hazard may exist.
3. This unit is heavy and should be handled with care when transporting on and off of the roof.

For Comments and Questions:

Please contact

Firestone Building Products

A Division of BFS Diversified Products, LLC
310 E. 96th Street Indianapolis, IN 46240
Sales: (800) 428-4442 – Technical (800) 428-4511
WWW.Firestonebp.com